

Recommended temperature:

- Operating: 32°F to 113°F (0° to 45°C)
 - Storage: 14°F to 140°F (-10° to 60°C)
- Low temperatures (<14°F) or high temperatures (>140°F) will shorten battery life.

KULUMI® **SHEEP**

INSTRUCTIONS

3+

Please be conscious of the environment and dispose of the Li-ion battery responsibly.



ASTM F963
ALL NEW MATERIALS
POLYESTER FIBERS



IMPORTANT NOTICE!

- (1) The transformer, power supply or battery charger used with the electronic toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- (2) Batteries are only to be charged by adults or by children at least 8 years old.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

www.kulumi.org


KULUMI and the "Rising Sun" logo are Hope Tech Global trademarks.




HTG®
HOPE TECH GLOBAL

Ningbo Hope Tech Global Co., Ltd.
502-1 Wenshui Road, Yinzhou District, Ningbo, Zhejiang, China 315100
Copyright © 2024 KULUMI Sheep. All Rights Reserved.

How to navigate

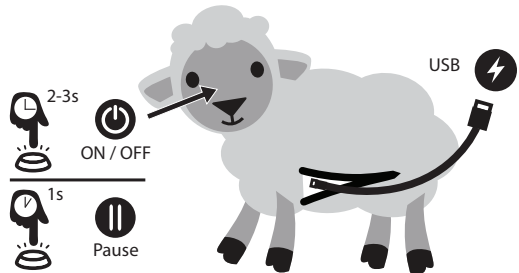

AUDIO PLAYER LIGHT INDICATOR:
(Below the sheep's neck)
RED SOLID – Playing
RED FLASHING – Pause

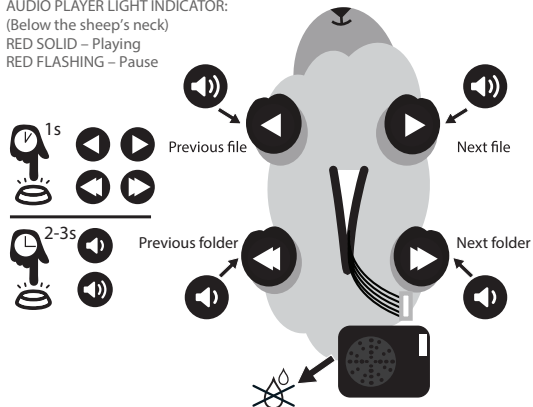


kulumi.org

How to wash

Remove the audio player/battery pack before washing as it should NOT get wet.

1. Open the zipper.
2. Detach the audio player/battery pack from the wires by pulling gently.
3. Hand wash or machine wash.

The integrated wires and buttons can be soaked as they are waterproof.

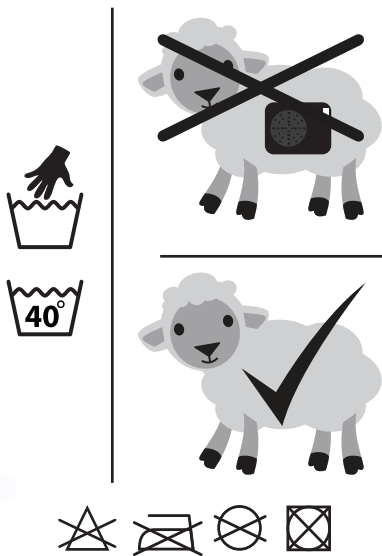

Auto shutdown function: The sheep can play non-stop for 25 minutes. Then it will stop and the red light will blink for 5 minutes before turning off completely.

How to recharge

When the battery is low, you will hear the following: "Low battery, recharge."

This toy is only to be connected to equipment bearing either of the following symbols:



Open the zipper and plug the cable into the battery pack to charge.

BATTERY STATUS LIGHT INDICATOR:
(Below the sheep's neck)

RED – Low battery
GREEN – Full



TYPICAL CHARGE TIME:
5 hours via 5V DC Min 0.2A

BATTERY:

- 3.7V / 500mAh Li-ion battery
- 500 charge cycles
- 6 to 8 hours of use

Warning

- Do not use product near fire or in a high temperature area.
- Do not soak the product with its audio player/battery pack into water or other liquids.
- Do not disassemble, alter or apply heat to the product.
- Batteries must not be exposed to excessive heat such as fire, or similar.
- To prevent possible hearing damage, do not listen to high volume for long periods.
- Please be conscious of the environment and dispose of lithium battery responsibly.